

SPD 2100 Smart Pet Water Fountain

Quick Start Guide

Safety Notice

WARNING: Failure to follow these safety notices could result in fire, electric shock, other injuries, or damage to the Smart Pet Water Fountain and other property. Read all the safety notices below before using the Smart Pet Water Fountain.

- Avoid high humidity or extreme temperatures.
- Avoid long exposure to direct sunlight or strong ultraviolet light.
- Do not drop or expose the unit to intense vibration.
- Do not disassemble or try to repair the unit yourself.
- Do not expose the unit or its accessories to flammable liquids, gases or other explosives.

Technical Specifications

| Hopper Capacity | • 2L |
|-----------------|----------------------|
| Pump Head | • 0.4m-1.5m |
| Pump Flow | • 220l/h |
| Power Adapter | • DC 5V 1A |
| Material | • ABS Plastic |
| Dimension | • 190 x 190 x 165 mm |
| N. W. | • 0.8 kg |
| Color | • White |





The Pet water fountain allows you to feed your pet automatically and help your pet get in the habit of drinking water on his own, which will make your pet healthier.

This guide will provide you with an overview of the product and help you get through the initial setup.

Features:


- Dual feeding mode Smart & Normal
- Double filtr ation
- Silent pump
- Divided-flow body
- Water shortage alarm
- · Water quality monitoring reminder
- Lighting reminder





- Pet Feeder x 1
- Filter Cotton x 2
- Micro USB cable x 1
- Quick Guide x 1

Please check the condition and the accessories of water fountain after you open the box.



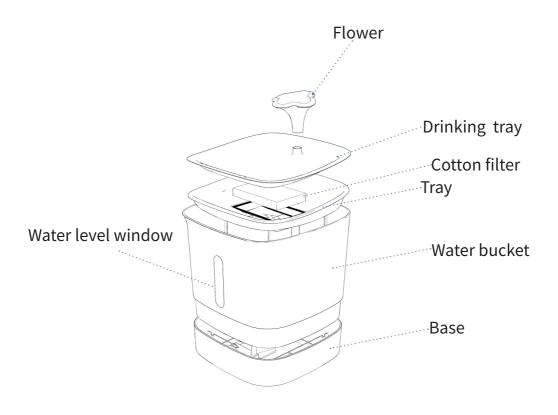

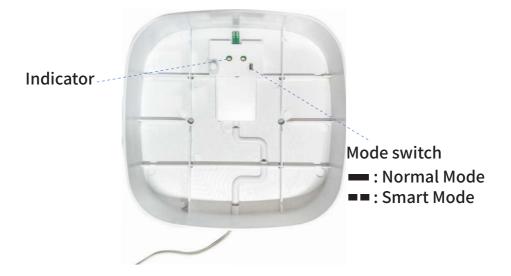

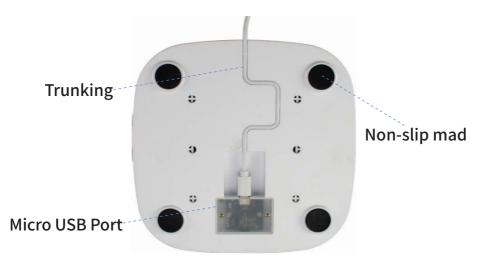

Get started



Figure 1

Figure 2

- 1. Take out the water fountain and internal accessories;
- 2. Rinse the water bucket and the outlet pipe with clean water;
- 3. Insert the outlet pipe into the outlet hole of the silent water pump, and press it firmly;

4. Add water to the water bucket, and do not exceed the highest water level;

5. Install the tray;

6. Rinse the filter box with clean water and put it into the tray filter box slot;

7. Install drinking tray;

8. Adjust the mode switch on the base to select the water outlet mode;9. Insert the USB cable into the Micro USB socket, and press the cable into the slot (reference Figure 2), place the entire base in a stable place;10. Connect the base to the power supply, and place the water bucket on the base. The water fountain indicator lights up and starts to work.

• Indicator

The indicator's status gives the following information:

| 0 | 0 |
|----------------------------|--------------------------------|
| Indicator's status | Device's status |
| Blue light is always on. | Water comes out constinuiously |
| Purple light is always on. | Water comes out intermittently |
| | (Work 10S,pause 5S) |
| Red light is flashing | Water shortage alarm |
| Red light is always on | Water quality monitoring alarm |
| | |